SoundLink®

Wireless Mobile speaker

Owner's Guide | オーナーズガイド

BOSE®

Better sound through research®

©2011 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA

AM348807 Rev.02

348807-0010

Pdf downloaded from http://www.thepdfportal.com/soundlinkxmanual_11272.pdf

SAFETY INFORMATION

Please read the owner's guide

Please take the time to follow the instructions in this owner's guide carefully. It will help you to properly use your new Bose® product and enjoy its features. Please save this owner's guide for future reference.

CAUTION
RISK OF ELECTRICAL SHOCK
DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED PERSONNEL.

AVIS
RISQUE DE CHOC ÉLECTRIQUE
NE PAS OUVRIR
ATTENTION : POUR RÉDUIRE LE RISQUE DE DÉCHARGE
ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE (OU
L'ARRIÈRE). IL NE SE TROUVE À L'INTÉRIEUR AUCUNE
PIÈCE POUVANT ÊTRE RÉPARÉE PAR L'USAGER.
S'ADRESSER À UN RÉPARATEUR COMPÉTENT.

The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this owner's guide.

WARNINGS and CAUTIONS

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The product shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on or near the product. As with any electronic products, use care not to spill liquids into any part of the product. Liquids can cause a failure and/or a fire hazard.
- The power supply must be used indoors only. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
- Make no modifications to the product or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance, and may void the warranty.
- Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.
- The battery is only intended for use with the power supply or charger provided with the system. Refer to charging instructions in the system owner's guide. Do not continue charging the battery if it does not reach full charge within the 10 hours. Overcharging may cause the battery to become hot, rupture, or ignite. If you see any heat deformation or leakage, properly dispose of the battery.
- Do not attempt to charge the battery in temperatures outside the range of 32°-104°F (0°-40°C).
- Keep batteries out of the reach of children and pets.
- If the battery begins to leak, do not allow the liquid to come in contact with your skin or eyes. If contact has been made, wash the affected area with plenty of water and seek medical advice immediately.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

- Do not expose the product or battery to excessive heat, including direct sunlight or fire and storage or use inside cars in hot weather, where it can be exposed to temperatures in excess of 140°F (60°C). Doing so may cause the battery and power supply to generate heat, rupture, or ignite. Using the product in this manner also may result in a loss of performance and a shortened life expectancy.
- If the battery is damaged and ignites, do not use water to extinguish flames. Instead, use a functioning fire extinguisher.
- Do not step on, throw, or drop batteries or the power supply or expose them to a strong shock. Do not pierce, crush, dent, or deform the batteries or power supply in any way. If either becomes deformed, properly dispose of it.
- Do not short-circuit batteries. Avoid storing them around metal objects such as keys, pocket change, paper clips, and jewelry.
- Do not dismantle, open, or shred the battery.
- The battery is intended to be used only with the Bose product and the power supply provided, or Bose power supply or charger designed for use with this product.
- This product is intended to be used only with the power supply provided, or Bose power supply or charger designed for use with this product.
- The cells in the batteries perform best when operating at normal room temperature - 70°F (20°C).
- Replace the SoundLink® system battery only with a genuine replacement battery from Bose or an authorized Bose dealer. Bose cannot warrant the safety and compatibility or assure the operability of batteries from other manufacturers for use in operating the SoundLink® system. DO NOT attempt to use the SoundLink® system battery to power other electronics. Doing so may result in permanent damage to your system and/or personal injury.
- Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when listening to audio for extended periods.

This product contains magnets which can be harmful to pacemaker wearers.

Please dispose of a used or damaged battery promptly and properly, following all local regulations.
Do not incinerate.

To return a system battery for recycling, contact Bose or your Bose dealer. In the United States only, call 1-800-905-2180 or visit the Bose® website at www.Bose.com. For other regions, see the contact information included in the carton.

CE This product conforms to all EU Directive requirements as applicable by law.
The complete Declaration of Conformity can be found at www.Bose.com/static/compliance

Pdf downloaded from http://www.thepdfportal.com/soundlinkxmanual-112272.pdf

Important Safety Instructions

1. **Read these instructions –** for all components before using this product.
2. **Keep these instructions –** for future reference.
3. **Heed all warnings –** on the product and in the owner's guide.
4. **Follow all instructions.**
5. **Do not use this apparatus near water or moisture –** Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water is present.
6. **Clean only with a dry cloth –** and as directed by Bose Corporation. Unplug this product from the wall outlet before cleaning.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions –** To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in system, such as a bookcase or a cabinet that may keep air from flowing through its ventilation openings.
8. **Do not install near any heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
9. **Only use attachments/accessories specified by the manufacturer.**
10. **Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
11. **Unplug this apparatus during lightning storms or when unused for long periods of time –** to prevent damage to this product.
12. **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped –** Do not attempt to service this product yourself. Opening the enclosure may expose you to dangerous voltages or other hazards. Please call Bose to be referred to an authorized service center near you.
13. **To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.**
14. **Do not let objects or liquids enter the product –** as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
15. **See product enclosure for safety-related markings.**

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

16. **Use proper power sources –** Plug the product into a proper power source, as described in the operating instructions or as marked on the product.

Information about products that generate electrical noise

The SoundLink® Wireless Mobile speaker complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. The system must not be co-located or operating in conjunction with any other antennas or transmitters.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

U.S.A. only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes to this device not expressly approved by Bose Corporation may void the user's authority to operate this device.

Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The SoundLink® Wireless Mobile speaker complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. The system must not be collocated or operating in conjunction with any other antennas or transmitters.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

SAFETY INFORMATION

Names and Contents of Toxic or Hazardous Substances or Elements

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	**Mercury (Hg)**	**Cadmium (Cd)**	**Hexavalent (CR(VI))**	**Polybrominated Biphenyl (PBB)**	**Polybrominated diphenylether (PBDE)**
PCBs	**X**	**0**	**0**	**0**	**0**	**0**
Metal parts	**X**	**0**	**0**	**0**	**0**	**0**
Plastic parts	**0**	**0**	**0**	**0**	**0**	**0**
Speakers	**X**	**0**	**0**	**0**	**0**	**0**
Cables	**X**	**0**	**0**	**0**	**0**	**0**

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006.

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006.

Please complete for your records

Serial number
(on the back panel of the product): _____

Purchase date: _____

Dealer name: _____

Dealer phone: _____

Please keep your sales receipt with this owner's guide.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

CONTENTS

INTRODUCTION 8
Overview 8
Unpacking 8
Opening the cover 9
Placing the speaker 10

OPERATION 11
Connecting to AC power 11
System status indicators 13
Control buttons 14
Pairing with *Bluetooth*® devices 15
Adding another source 18
Operating on battery power 19

MAINTENANCE AND CARE 20
Replacing the battery 20
Troubleshooting 25
Cleaning 29
Contacting customer service 29
Limited warranty 29
Technical information 30

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

INTRODUCTION

Overview

Thank you for purchasing the SoundLink® Wireless Mobile speaker. Enjoy music wirelessly from your smartphone, tablet, laptop, or other *Bluetooth*® enabled device anywhere you choose.

Features

- Wireless *Bluetooth* link eliminates the need to dock or physically connect your *Bluetooth* device.
- Rechargeable lithium-ion battery provides hours of Bose® performance.
- Integrated cover enables easy grab-and-go mobility.

Unpacking

Check the carton for the SoundLink® Wireless Mobile speaker, power supply, and 3.5 mm stereo cable. Save the carton and packing materials in case they are needed to ship the product.

If any part of the product appears to be damaged, do not attempt to use it. Contact your authorized Bose dealer immediately or call Bose Customer Service. Refer to the contact list enclosed in the carton for contact information.

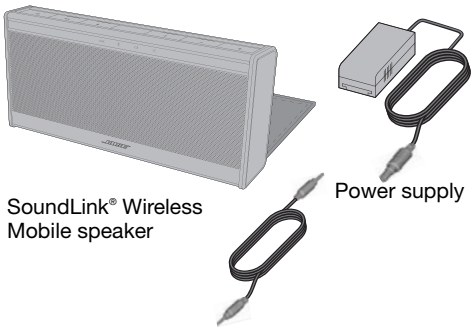

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

Opening the cover

When closed, the cover protects the SoundLink® Wireless Mobile speaker from damage. When opened, the cover serves as a stand for the speaker. No sound is emitted from the speaker unless the cover is opened.

To open the cover

1. Pull on the fabric tab imprinted with the Bose® logo.

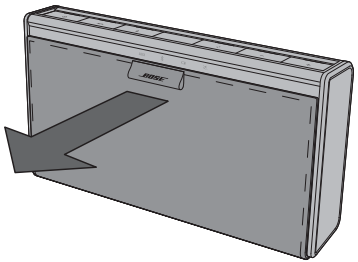

2. Swing the cover down and under the unit.

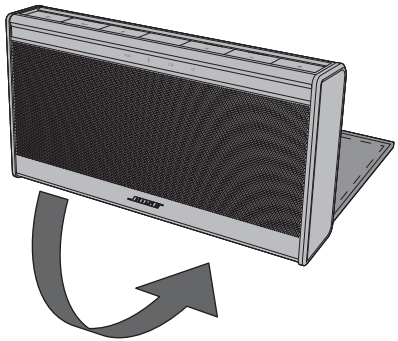

When you close the cover, magnets hold it in place. If you close the cover while audio is playing, the speaker turns itself off.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

Placing the speaker

When using your SoundLink® Wireless Mobile speaker indoors, the tonal quality can vary depending on where the speaker is placed in a room. When moving the speaker around within a room or from room to room, keep the following guidelines in mind:

- The speaker is designed to sound best when placed on a shelf, counter, desk, or tabletop that is 24 to 48 inches high.
- For best bass response, the speaker should be placed near a wall; bass response decreases as the speaker is placed closer to the center of a room.
- When operating the speaker, always use the cover as a stand. Do not lay the speaker on its back. Sound is emitted from both the front and rear of the unit.
- The speaker should not be placed in small areas that are enclosed on all sides except the front, as this will adversely affect sound quality.
- Do not place the speaker on wet or dirty surfaces. Doing so could transfer dirt, sand, or moisture onto the speaker when the cover is closed.

If you are using your speaker outdoors, you should expect the tonal quality to change as you move farther from the speaker.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

Connecting to AC power

Before using your new SoundLink® Wireless Mobile speaker the first time, you should connect it to AC (mains) power.

To connect to AC power

1. Depending on your region of the world, do one of the following to prepare your power pack for use:

   A. Unfold the prongs from the power pack body

   OR

   B. Slide the AC adapter for your region into the power pack.

A. Unfold prongs

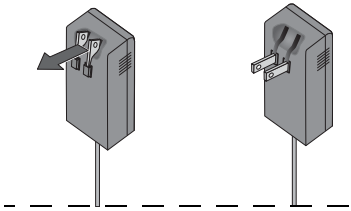

B. Slide AC adapter into power pack

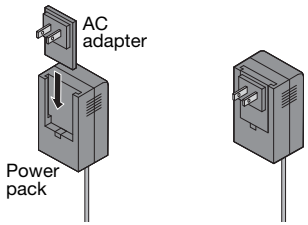

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

2. Plug the DC power cord on the power supply into the DC connector on the SoundLink® speaker.
3. Plug the power supply into a live AC (mains) outlet.

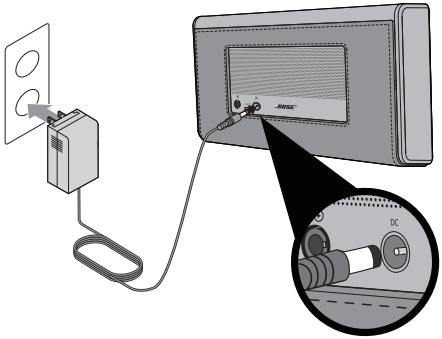

A tone is emitted from the speaker to confirm connection to AC power, and charging begins.

You can immediately use your SoundLink® speaker once it is connected to AC power.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

System status indicators

The status indicators, located on the front of the SoundLink® speaker, illuminate to indicate when a source or feature is activated.

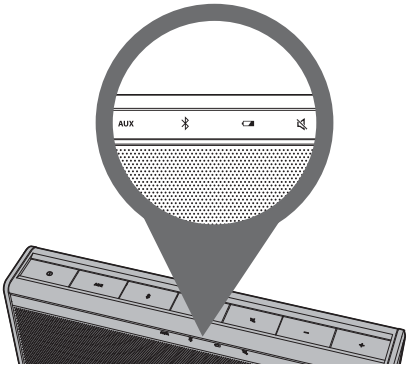

AUX Indicates the speaker is playing the source connected to the ⊕ (AUX) input.

Indicates the SoundLink® speaker state when the *Bluetooth*® source is selected:

- Discoverable – Speaker is discoverable and ready to pair with a new device. The indicator slowly fades on and off approximately once every second.
- Connecting – Speaker is attempting to connect to a paired device. The indicator flashes on and off approximately twice every second.
- Connected – Speaker is connected to a paired device. The indicator remains steadily on.
- Disconnected – Speaker is available to connect to any paired device. The indicator flashes on and off approximately once every three seconds.

See “Pairing with *Bluetooth* devices” on page 15 for more information on using *Bluetooth* wireless technology.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

- Indicates the battery power level. See “Operating on battery power” on page 19 for more information on reading the indicator.
- Flashes to indicate when the sound is muted.

Control buttons

The control buttons are located on the top of the speaker.

- Press to turn the speaker on or off.
- Press and hold to check the battery charge state (see “Checking the battery” on page 19).

Press to select the source connected to the ⊕ (AUX) input. See “Adding another source” on page 18.

- Press to select the *Bluetooth*® source. The speaker attempts to connect to the last paired device. See “Pairing with *Bluetooth* devices” on page 15.
- Press and hold for 3 seconds to set the speaker to discoverable mode and allow pairing with another *Bluetooth*® device.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

- When a device is connected, press to disconnect the device. The SoundLink® speaker then waits for a paired device to connect.

When the *Bluetooth* source is selected, and no device connects within 30 minutes, the speaker turns itself off.

Mutes sound from the speaker.



Plus increases speaker volume. Minus decreases speaker volume. The source indicator on the front panel flashes once each time the button is pressed. The indicator flashes twice when maximum or minimum volume is reached.

Pairing with *Bluetooth*® devices

Pairing occurs when two *Bluetooth* devices communicate with each other and establish a connection. A record of information about this connection is then stored in the memory of each device. Once you pair a device with the SoundLink® speaker, you should not have to pair it again.

The SoundLink® speaker can pair with up to six *Bluetooth* devices. However, it can only connect to, and play audio from one device at a time.

To begin pairing with a *Bluetooth* device

1. With the *Bluetooth* device and the SoundLink® speaker both turned on, press and hold the *Bluetooth* button on the speaker for three seconds to make the speaker discoverable.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

The *Bluetooth*® indicator on the SoundLink® speaker slowly fades on and off approximately once every second to show that the speaker is discoverable.

2. Set your *Bluetooth* device to "discover" the SoundLink® speaker, then locate the *Bluetooth* device list.
3. From the *Bluetooth* device list, select the device named "Bose SoundLink."
4. If your device asks for a passkey, enter digits 0000 (four zeros) and press OK. Some devices also ask you to accept the connection.

   Your *Bluetooth* device indicates when pairing is complete. The SoundLink® speaker speaker indicates pairing is complete when the *Bluetooth* indicator stops fading on and off and remains steadily on.

Note: *If Bluetooth appears to fail, or you are unable to pair your device, press and hold Mute on the speaker for 10 seconds until the LEDs briefly flash. Then press Power to turn the SoundLink® speaker back on.*

To connect a device

To connect a previously paired device, press the *Bluetooth* button on the SoundLink® speaker. The *Bluetooth* indicator on the speaker flashes on and off approximately twice every second until the device connects. Then the indicator stops flashing and remains steadily on when the speaker and device have successfully connected.

To pair additional devices

With the *Bluetooth* device and the SoundLink® speaker both turned on, press the *Bluetooth* button on the speaker for three seconds to make the speaker discoverable again. Then follow steps 2 - 4 on this page.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

The SoundLink® memory can hold up to six paired devices. You can pair more than six devices, but the memory will never contain more than six. When the memory is full with six devices and an additional device is paired, the *least recently used* device is deleted from memory and replaced by the newly paired device.

Clearing memory

To clear the SoundLink® speaker memory of all devices, press and hold the *Bluetooth*® button on the speaker (about 10 seconds) until you hear a tone.

The SoundLink® speaker clears all *Bluetooth* devices from its memory and then becomes discoverable.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

Adding another source

You can use another audio device, such as a portable digital music player, with your SoundLink® speaker. This requires using an audio cable with a 3.5 mm plug on one end to connect with the AUX input on the SoundLink® system. A cable with a 3.5 mm plug on both ends is provided.

To add a source

1. Plug the cable from the audio device into the ⊸ (AUX) connector on the back of the SoundLink® speaker.
2. Press the AUX button.
3. Adjust the volume on the connected device to *near* maximum, then use the SoundLink® speaker volume buttons to adjust the level.

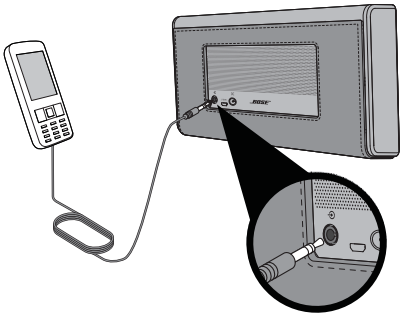

If a device is connected but not playing audio, the speaker will turn itself off after 30 minutes.

Service connector

The service connector on the rear of the speaker is for software updates only and will not play audio from any connected device.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

Operating on battery power

A fully charged battery provides approximately three hours of use at maximum volume. The rate of battery discharge varies with the volume setting. You can extend the battery playback time by reducing the volume.

Checking the battery

The battery status indicator is normally off to conserve battery power. To check the charge level, press and hold the power button and observe the battery indicator.

Green: .....70% or more of full charge
Yellow: .....20% to 70% of full charge
Red: .....20% or less (charge needed)

Battery protection mode

When the SoundLink® speaker is unplugged and unused for more than 14 days, it enters battery protection mode to preserve battery power. To reactivate the speaker, connect it to AC (mains) power (see "Charging the Battery," below). You can immediately use the system while the battery charges.

Charging the battery

The battery status indicator on the SoundLink® speaker glows red when the battery needs charging. The battery can be charged whether the cover is opened or closed.

To charge the battery

Plug the power cable into the DC POWER connector on the back panel of the SoundLink® speaker. Then plug the power pack cord into a live AC (mains) outlet. The speaker emits a tone to confirm the power connection. Recommended charging time is 3 hours. The battery status indicator indicates charging status.

Yellow: ..... Battery charging
Off: ..... Charging cycle done

Note: *Do not store your SoundLink® speaker for extended periods when the battery status indicator is red.*

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

MAINTENANCE AND CARE

Replacing the battery

The battery should be replaced when:

- The battery status indicator remains yellow after 10 hours of charging.
- The period of battery operation noticeably decreases.

For replacement batteries, contact the Bose organization in your country/region (visit http://global.Bose.com for Bose contact information in your country or region).

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

Troubleshooting

Problem	What to do
Speaker will not turn on (AC power)	• Make sure your system is connected to a working AC (mains) outlet.
Speaker will not turn on (battery power)	• Battery may be in protection mode or discharged – connect to working AC (mains) outlet to restore the battery to operational mode.
Paired *Bluetooth*® device will not connect	• If your device requires a passkey, make sure the one you entered was correct. • Turn the SoundLink® speaker off and back on. • Remove the SoundLink® speaker from the pairing list on your *Bluetooth* device pairing list (consult the device owner's manual for assistance). Then pair the device and the SoundLink® speaker again.
SoundLink® speaker indicates a connection, but is not playing music	• Turn off or disable *Bluetooth* on all other paired devices nearby (including Bose® preferred devices) and reconnect the device you want to hear. • Turn the SoundLink® speaker off and back on.
No audio from a *Bluetooth*® device	• Make sure your SoundLink® speaker is not muted, and the volume is up. • Make sure your *Bluetooth* device is playing audio, and the volume is up. • Your *Bluetooth* device may be out of range – try moving it closer to the SoundLink® speaker. • Turn the SoundLink® speaker off and back on.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

MAINTENANCE AND CARE

Problem	What to do
Cannot pair the SoundLink® speaker with my *Bluetooth*® device	• Make sure your SoundLink® speaker is discoverable. Press and hold the *Bluetooth* button (three seconds) until the *Bluetooth* indicator slowly flashes. • Make sure the *Bluetooth* capability of your *Bluetooth* device is turned on. • Your *Bluetooth* device may be out of range – try moving it closer to the SoundLink® speaker. • Make sure your *Bluetooth* device supports the transfer of audio. • Move your *Bluetooth* device and/or SoundLink® speaker away from other devices that generate electromagnetic interference. Examples are cordless phones, microwave ovens, wireless network routers, or other *Bluetooth* devices. • If possible, turn off all other nearby *Bluetooth* devices or disable their *Bluetooth* functionality. • Turn the SoundLink® speaker off and back on. • Refer to the owner's guide, help system, or technical support for your mobile device to learn how it pairs with other *Bluetooth* devices. • Reset the SoundLink® speaker: Press the mute button for 10 seconds. Your *Bluetooth* device is disconnected and the SoundLink® speaker turns off. Then press Power to turn the SoundLink® speaker back on. • Check for updated software for your *Bluetooth* device, or check owners.Bose.com for software updates to the SoundLink® Wireless Mobile speaker.
Poor sound quality from the AUX source	• Reduce the volume level on the AUX source. • Make sure the 3 mm plug is fully inserted into the SoundLink® speaker.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

Problem	What to do
Poor sound quality from a *Bluetooth*® device	• Your *Bluetooth* device may be out of range – try moving it closer to the SoundLink® speaker. • Move your *Bluetooth* device and/or SoundLink® speaker away from any device that generates electromagnetic interference, such as another *Bluetooth* device, cordless phone, microwave oven, or wireless router. • Reduce the number of applications running on your *Bluetooth* device. Running multiple applications can reduce the amount of internal resources available to transmit audio. Closing non-essential applications may improve audio quality. • Try turning off WiFi to improve audio quality. • Try unpairing your *Bluetooth* device from the SoundLink® speaker and then re-pairing the two. This action can possibly clear issues that might have occurred during initial device pairing. • Turn the SoundLink® speaker off and back on. • Reset the SoundLink® speaker: Press the mute button for 10 seconds. Your *Bluetooth* device is disconnected and the SoundLink® speaker turns off. Then press Power to turn the SoundLink® speaker back on. • Check for updated software for your *Bluetooth* device, or check owners.Bose.com for software updates to the SoundLink® Wireless Mobile speaker
No audio from the AUX source	• Make sure your connected device is on and playing. • Press the AUX button and check that the AUX source indicator is on. • Make sure the 3 mm plug is fully inserted into the SoundLink® speaker. • Increase the volume level on the device. • Increase the SoundLink® speaker volume.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

Cleaning

To clean the exterior surface of your product, you can wipe it using a soft, dry cloth.

- Do not use solvents, chemicals, or sprays.
- Do not allow liquids to spill or objects to drop into any openings.

Contacting customer service

For questions about the SoundLink® Wireless Mobile speaker, contact your local Bose dealer. To contact Bose directly, see the contact list included with your SoundLink® speaker or visit http://owners.Bose.com.

Limited warranty

Your SoundLink® Wireless Mobile speaker is covered by a limited warranty. Details of the limited warranty are provided on the product registration card that is included in the carton. Please refer to the card for instructions on how to register. Failure to register will not affect your limited warranty rights.

What you must do to obtain limited warranty service

Return the product, with proof of purchase from an authorized Bose dealer, using the following procedures:

1. Contact the Bose organization in your country/region (visit http://global.Bose.com for Bose contact information) for specific return and shipping instructions.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

2. Label and ship the product, freight prepaid, to the address provided by the Bose organization in your country.
3. Place any necessary return authorization number prominently on the outside of the carton. Cartons not bearing a return authorization number, where required, will be refused.

Technical information

Power supply rating
Input: 100 - 240VAC, 50/60Hz, 600mA
Output: 17VDC, 1A Max

Input power rating
Input: 17 - 20 VDC, 1A Max

Dimensions
5.1"H x 9.6"W x 1.9"D
(13.0 cm x 24.4 cm x 4.8 cm)

Weight
2.8 lb. (1.3 kg)

Temperature range for use
0° - 45°C (32° - 113°F)

Bluetooth® QD ID
SoundLink® speaker: B017612

The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Bose Corporation is under license.

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

安全上の留意項目

このオーナーズガイドは必ずお読みください

オーナーズガイドの指示に注意して、慎重に従ってください。ご購入いただいた Bose® 製品が正しく使用でき、機能を十分に活用いただくために役立ちます。また、必要な時にすぐにご覧になれるように、大切に保管しておくことをおすすめいたします。

正三角形に矢印付き稲妻マークが入った表示は、製品内部に電圧の高い危険な部分があり、感電の原因となる可能性があることをお客様に警告するものです。

正三角形に感嘆符が入った表示は、製品本体にも表示されている通り、この取扱説明書の中で、取り扱い上およびメンテナンス上、重要な項目であることをお客様に警告するものです。

警告および注意

- 火災や感電の危険性を低減するために、機器を雨や湿気にさらさないでください。水漏れやしぶきがかかるような場所で製品を使用しないでください。また、花瓶などの液体が入った物品を製品の上や近くに置かないでください。他の電気製品と同様、システム内に液体が浸入しないように注意してください。液体が浸入すると、故障や火災の原因となることがあります。
- 電源アダプターは室内専用です。屋外、RV 車内、船上で使用するようには設計されていません。また、このような使用のテストもされていません。
- 製品またはアクセサリーを改造しないでください。許可なく製品を改造すると、システムの安全性と性能が損なわれるだけではなく、法令遵守の問題が生じ、製品保証が無効となる場合があります。
- 万一の事故や故障に備えるために、電源プラグはよく見えて容易に手が届く位置にあるコンセントに接続してください。
- 火の付いたろうそくなどの火気を製品の上や近くに置かないでください。
- バッテリーにはシステムに付属の電源アダプターまたは充電器を使用してください。充電方法は、システムの取扱説明書を参照してください。バッテリーが 10 時間以内に完全に充電されない場合は、それ以上充電を続けないでください。過充電により、バッテリーの高温化、破裂、発火のおそれがあります。熱による変形や漏れが見られる場合は、バッテリを正しく処分してください。
- 気温が 0℃ 以下、または 40℃ を超える環境では、バッテリーを充電しないでください。
- バッテリーは、乳幼児やペットが触れない場所に保管してください。

Pdf downloaded from http://www.theiedportal.com/soundlinklxmanual_11272.pdf

安全上の留意項目

- バッテリーが液漏れしている場合は、漏れた液に触れたり、目の中に入らないようにしてください。触れてしまった場合は、多量のきれいな水で十分に洗った後、すぐに医師の治療を受けてください。
- 製品やバッテリーを直射日光や火気などで高温になる場所に放置したり、炎天下の車内など 60℃ 以上になる場所で使用または保管しないでください。この場合、バッテリーと電源アダプターの高温化、破裂、発火の恐れがあります。このような状況で製品を使用する事は、性能の低下や寿命の短縮をもたらします。
- バッテリーが破損して発火した場合は、消火のために水を使用せず、適切な消火器を用いてください。
- バッテリーや電源アダプターを踏みつけたり、投げつけたり、落としたりして、強い衝撃を与えないでください。バッテリーや電源アダプターに穴を開けたり、へこみや変形を加えたりしないでください。どちらかが変形した場合は、正しく処分してください。
- バッテリーをショートさせないでください。鍵、コイン、ペーパークリップ、アクセサリーなどの金属物のそばに置かないでください。
- バッテリーを分解したり、切断したりしないでください。
- バッテリーは、ボーズ製品、付属の電源アダプター、あるいは本製品の動作や充電用として設計された電源アダプター・充電器でのみ使用できます。
- 本製品は、付属の電源アダプター、あるいは本製品の動作や充電用として設計された電源アダプター・充電器でのみ使用できます。
- バッテリー内部の充電部品は、通常の室温(20℃)で最も効率良く動作します。
- SoundLink® system 用バッテリーを交換する場合は、弊社または Bose 認定ディーラーより正規のバッテリーをお求めの上、交換してください。弊社では、SoundLink® system で他社製のバッテリーを使用した場合の安全性、互換性、性能について、保証いたしかねます。また、SoundLink® system 用バッテリーを他の機器の電源として使用しないでください。使用した場合、機器への恒久的な損害やけがの原因となる恐れがあります。
- 大きな音量で長時間続けて聞くと、聴力に悪い影響を与えることがあります。ヘッドホンを長時間使用する場合は、過度な音量を避けるようにしてください。

この製品に含まれている磁石は、ペースメーカーに悪影響を与える恐れがあります。

使用が終わったバッテリーや損傷したバッテリーは、速やかに地域の条例に従って正しく処分してください。
焼却しないでください。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

安全上の留意項目

バッテリーのリサイクルにご協力ください。使用済みバッテリーは、リサイクル協力店に設置してある「小形充電式電池リサイクル BOX」に入れてください。詳しくは、一般社団法人 JBRC ホームページ(http://www.jbrc.com)をご覧ください。弊社は、一般社団法人 JBRC に加盟し、リサイクルを実施しています。

CE この製品は、法の定めに基づき、EU 指令の全ての要件に準拠しています。完全な適合宣言書については、www.bose.com/static/compliance/を参照してください。

安全上の留意項目

1. **本書をお読みください**。製品の使用前に全体に目を通してください。
2. **必要な時にご覧になれるよう、本書を保管しておいてください**。
3. **製品上および設置ガイド・操作ガイドに示されている全ての警告に留意してください**。
4. **すべての指示に従ってください**。
5. **この製品を水や湿気の近くで使用しないでください**。この製品を風呂、洗面台、台所の流し、洗濯桶、湿気のある地下室、プールの近く、その他の水や湿気のある場所では使用しないでください。
6. **お手入れの際には、乾いた布で拭いてください**。ボーズ社の指示に従ってください。お手入れの前に、この製品の電源プラグをコンセントから抜いてください。
7. **通気孔は塞がないでください。メーカーの指示に従って設置してください**。製品の動作の信頼性を確保し、過熱を防ぐために、設置の際に適切な通気を妨げないでください。例えば、ベッドやソファーの上など、通気孔が塞がれるような場所に置かないでください。本棚やキャビネットなど、通気孔の空気の流れを妨げるような密閉された家具の中には置かないでください。
8. **ラジエータ、暖房送風口、ストーブ、その他の熱を発する装置(アンプを含む)の近くには設置しないでください**。
9. **指定されたアタッチメントまたはアクセサリのみを使用してください**。
10. **電源コードが踏まれたり挟まれたりしないように保護してください。特にプラグやテーブルタップ、装置側の接続部などには注意してください**。
11. **雷雨時や長期間使用しない場合は、製品の損傷を防ぐため、電源プラグを抜いてください**。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

12. **サービスが必要な際には、必ず資格を持つサービス担当者にお任せください。装置に何らかの損傷がある場合は、サービスが必要です。たとえば、電源コードやプラグの損傷、液漏れ、物が装置上に落下した場合、装置に雨や湿度がかかった場合、正常に機能しない場合、装置を落とした場合などにはサービスが必要です。**本製品を自身でサービスしようとしないでください。カバーを開くと、電圧の危害やその他の危険にさらされることがあります。サービスに関しましては、ボーズ株式会社サービスセンターにお問い合わせください。

13. **火災や感電を避けるため、壁のコンセントや延長コード、テーブルタップなどの定格容量を超える状態で製品を使用しないでください。**

14. **製品に異物が混入したり、液体が浸入しないようにしてください。**異物や液体が電源回路に触れてショートすると、火災や感電の原因となる恐れがあります。

15. **製品本体の安全に関する表示を参照してください。**

16. **適切な電源を使用してください。**取扱説明書または製品本体の表示に従い、製品の電源プラグを適切な電源に差し込んでください。

Information about products that generate electrical noise

The SoundLink® Wireless Mobile speaker complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. The system must not be co-located or operating in conjunction with any other antennas or transmitters.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

U.S.A. only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energyand, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to

Pdf downloaded from http://www.thepdfportal.com/soundlinkiiimanual-11272.pdf

correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes to this device not expressly approved by Bose Corporation may void the user's authority to operate this device.

Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The SoundLink® Wireless Mobile speaker complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. The system must not be collocated or operating in conjunction with any other antennas or transmitters.

製品情報の控え

シリアル番号(製品背面に記載): _____

購入日 : _____

店名 : _____

電話番号 : _____

このガイドと共に領収書を保管してください。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

ご使用前に、下記の「留意項目」をよくお読みになり、正しくお使いください。

この「安全上の留意項目」は、製品を安全に正しくお使いいただき、あなたや他の人々への危害や財産への損害を未然に防止するため、いろいろな絵表示をしています。内容をよく理解してから本文をお読みください。

絵表示について

⚠ 警告 この表示を無視して、誤った取り扱いをすると、人が死亡または重傷を負う可能性が想定される内容を示します。

⚠ 注意 この表示を無視して、誤った取り扱いをすると、人が損傷を負う可能性が想定される内容および物的損害のみの発生が想定される内容を示します。

⚠ △記号は警告・注意を促す内容があることを告げるものです。

⃠ ⃠記号は禁止の行為であることを告げるものです。（左図の場合は分解禁止を意味します）

❗ ●記号は行為を強制したり指示する内容を告げるものです。

●異常が発生したとき

⚠ 警告

変なにおいや音がしたときは、すぐに電源スイッチを切り、電源プラグを抜く

そのままの状態で使用すると、火災や感電の原因となります。すぐに電源スイッチを切り、電源プラグをコンセントから抜いてください。煙が出なくなるのを確認して、販売店に修理をご依頼ください。

内部に水や異物が入ったときは、すぐに電源スイッチを切り、電源プラグを抜く

そのままの状態で使用すると、火災や感電の原因となります。すぐに電源スイッチを切り、電源プラグをコンセントから抜いて、販売店に点検をご依頼ください。特に

Pdf downloaded from http://www.pdfportal.com/soundlinklxmanual_11272.pdf

⚠ 警告

落としたり、キャビネットを破損したときは、すぐに電源スイッチを切り、電源プラグを抜く

そのままの状態で使用すると、火災や感電の原因となります。すぐに電源スイッチを切り、電源プラグをコンセントから抜いて、販売店に点検をご依頼ください。

DC パワーコードやプラグが傷んだ場合は交換する

DC パワーコードや電源プラグが傷んだ状態（芯線の露出、断線、変形など）で使用すると、火災や感電の原因となります。販売店に交換をご依頼ください。

安全上の留意項目

●設置保管するとき

⚠ 警告

本機の上や周囲に、小さな金属物を置かない

通風孔などから内部に落下した場合、火災や感電の原因となります。

電源プラグは根元まで確実に差し込む

差し込みが不完全な場合、発熱による感電や火災の原因となります。また、ほこりがたまり易くなったり、プラグの金属部分に触れる危険性があります。

不安定な場所に置かない

ぐらついた台の上や傾いた所、振動する所など、不安定な場所に置かないでください。落ちたり倒れたりして、けがや事故の原因となります。

梱包袋は安全な場所に保管する

製品を梱包していた袋は、お子様の手の届かない安全な場所に保管してください。窒息などの事故の原因となります。

⚠ 注意

ほこり、油煙、湯気、湿気、高温の場所に置かない

ほこり、油煙、湿気の多い場所や、直射日光の当たる場所、直接ライトが当たる場所、高温になる車の中などには置かないでください。故障の原因となります。

⚠ 注意

ゴムやビニール製品に本体を長期間接触させない

外装が変質し跡が残ることがあります。

移動させる場合は、DC パワーコードその他の接続線を外す

コードに無理な力が加わって傷付き、火災や感電の原因となることがあります。また他の接続線が引っかかり、けがの原因となることがあります。

電源アダプターを抜くときは、DC パワーコードを引っ張らない

コードが傷付き、火災や感電の原因となることがあります。必ず電源プラグを持って抜いてください。

●使用するとき

⚠ 警告

ぬれた手で電源アダプターを抜き差ししない

感電の原因となります。

雷が鳴り出したら、本体やケーブル類に触れない

感電の原因となります。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

●使用するとき

⚠ 注意

小さな部品は幼児の手の届かないところに置く

誤飲や窒息などの危険がありますので、小さなお子様の手の届かない所に保管してください。

長時間音が歪んだ状態で使用しない

スピーカーが発熱し、火災の原因となることがあります。

定期的に内部の掃除をする

5 年に一度程度を目安に、機器内部の掃除を販売店などにご相談ください。内部にほこりがたまったまま長時間掃除をしないと、火災や故障の原因となることがあります。特に、湿気の多くなる梅雨期の前に行うと、より効果的です。なお、掃除費用については販売店などにご相談ください。

電源アダプターやコンセント部の掃除をする

電源アダプターを差してあるコンセント部にほこりがたまると、火災の原因となることがあります。定期的にコンセント部の掃除をしてください。

●内蔵充電バッテリーについて

⚠ 警告

電池が液漏れしたら火気から遠ざける

電池が液漏れしたり、異臭がする時には、直ちに火気より遠ざけてください。漏れた電解液に引火し、破裂、発火する原因になります。

電池の異常に気づいたら使用を中止する

電池の使用、充電、保管時の異臭、発熱、変色、変形、その他、今までと異なることに気づいた時は、機器あるいは充電器より取り出し、使用しないでください。使用継続の場合は電池が発熱、破裂、発火する原因になります。

使用時間が極端に短くなった電池は使用しない

電池には寿命があります。機器の使用時間が短くなった時は、新しい電池とお取り替えください。交換時期を過ぎて使用した場合、バッテリーの内部短絡、温度上昇など電池を漏液、発熱、破裂させたり、充電器の故障の原因となる場合があります。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

安全上の留意項目

●*Bluetooth*®機器使用上の注意

⚠ 警告

本製品を分解 ・ 改造して使用しないでください。電波法に抵触します

心臓ペースメーカーまたは除細動器などを装着している人から 22cm 以上離して使用してください

ペースメーカーに影響を与え、重大事故につながる場合があります。

病院内や航空機の中などでは使用しないでください

高度な安全を要求される場所では絶対に使用しないでください。特定医療機器や航空機の計器類などの誤動作の原因となります。

本製品の使用周波数帯は2.4GHz帯です。他の無線機器も同じ周波数帯を使っていることがあり、電波干渉を防止するために、下記事項に注意してご使用ください。
本製品の使用周波数帯（2.4GHz帯）では電子レンジなどの産業・科学・医療用機器のほか、工場の製造ライン等で使用されている免許を要する移動体識別用構内無線局、免許を要しない特定小電力無線局、アマチュア無線局（以下「他の無線局」）が運用されています。

1. 本製品を使用する前に、近くで「他の無線局」が運用されていないことを確認してください。
2. 万一、本製品と「他の無線局」との間に電波干渉が発生した場合には、速やかに本製品の使用場所を変えるか、または機器の運用を停止（電波の発射を停止）してください。
3. その他、本製品の使用にあたり不都合やお困りのことが生じた時は、弊社までお問い合わせください。

良好な通信のために

・壁の内側や障害物によって通信距離が短くなります。特に鉄筋コンクリートなどを挟むと通信できない場合があります。
・電気製品（AV機器、OA機器）から約2m以上離してください。（特に電子レンジは通信に影響を受けやすいので3m以上離してください。）正常に通信できなかったり、テレビ、ラジオなどの場合は、受信障害になる場合があります。
・無線機や放送局の近くで正常に通信ができない場合は、通信場所を変更してください。
・使用しないときは、本製品の電源を切っておくことをおすすめします。他の*Bluetooth*機器から接続要求に応答するために常に電力を消費します。

無線LAN機器との電波障害について

・IEEE802.11g/bの無線LAN機器と本製品など*Bluetooth*機器は同一周波数帯（2.4GHz）を使用するため、お互いを近くで使用すると、電波障害が発生し、通信速度の低下や接続不能になる場合があります。この場合は、使用しない機器の電源を切ってください。

テレビ/ラジオを本製品の近くではできるだけ使用しないでください

・テレビ/ラジオなどは*Bluetooth*とは異なる電波の周波数帯を使用しています。そのため、本製品の近くでこれらの機器を使用しても、本製品の通信やこれらの通信に影響はありません。ただし、これらの機器を*Bluetooth*製品に近づけた場合は、本製品を含む*Bluetooth*製品が発する電磁波の影響によって、音声や映像にノイズが発生する場合があります。

間に鉄筋や金属およびコンクリートがあると通信できません

・本製品で使用している電波は、通常の家屋で使用される木材やガラスなどは通過しますので、部屋の壁に木材やガラスがあっても通信できます。ただし、鉄筋や金属およびコンクリートなどが使用されている場合、電波は通過しません。部屋の壁にそれらが使用されている場合、通信することはできません。同様にフロア間でも、間に鉄筋や金属およびコンクリートなどが使用されていると通信できません。

Pdf download from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

目次

はじめに 12
概要 12
付属品の確認 12
カバーを開く 13
スピーカーを配置する 14

操作 15
電源の接続 15
システムステータスインジケーターについて 17
電源および操作ボタン 18
Bluetooth® 機器とのペアリング 19
外部ソース機器の接続 22
バッテリーで使用するとき 23

お手入れ方法 24
バッテリーの交換について 24
故障かな？と思ったら 25
お手入れについて 28
お問い合わせ先 28
保証 28
仕様 29

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

はじめに

概要

このたびは SoundLink® Wireless Mobile speaker をお買い上げいただき、まことにありがとうございます。本製品をお使いになることにより、スマートフォン、タブレット、ノート PC などの *Bluetooth*® 対応機器の音楽を、どのお部屋からもワイヤレスでお楽しみいただけます。

特長

- ワイヤレス *Bluetooth* リンクにより、ドックやケーブルを使用して *Bluetooth* 機器と接続する必要がありません。
- 充電式リチウムイオンバッテリーを搭載し、電源がそばにないところでも、Bose® サウンドを長時間お楽しみいただけます。
- カバーが一体化しているため、持ち運びが簡単です。

付属品の確認

SoundLink® Wireless Mobile speaker の箱には、電源アダプターと 3.5 mm ステレオ音声ケーブルが同梱されています。後日機器の搬送が必要となった場合のために、箱や梱包材を保管されることをお勧めいたします。

万一、開梱時に付属品の損傷や欠品などが発見された場合は、そのままの状態を保ち、ただちにお買い上げになった販売店までご連絡ください。そのままでのご使用はお止めください。

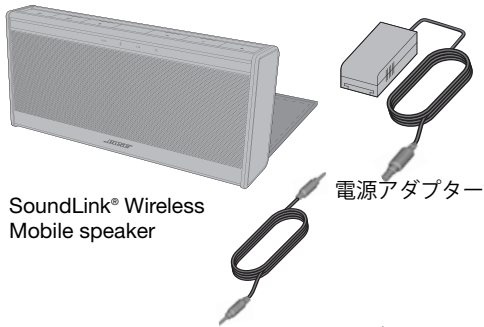

Powered by manuals.bose.com http://www.manuals.bose.com/soundlinklxmanual_11272.pdf

カバーを開く

カバーを閉じると、SoundLink® Wireless Mobile speaker を損傷から保護することができます。カバーを開くと、スタンドとしてお使いいただけます。カバーを閉じたままでは、スピーカーから音声は再生されません。

カバーを開くには

1. Bose® ロゴが印刷されている布のつまみを引きます。

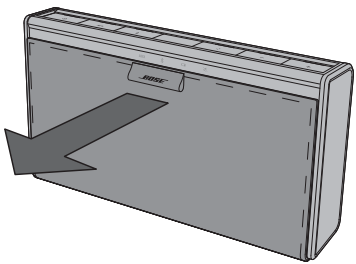

2. カバーを下向きに回転させ、本体の下に来るようにセットします。

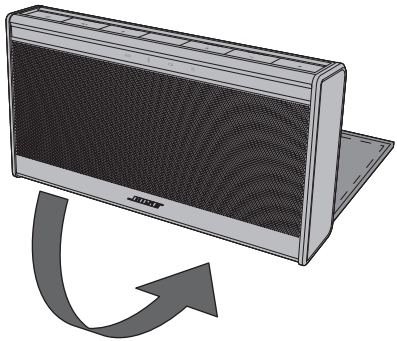

カバーを閉じると、マグネットで固定されます。音声の再生中にカバーを閉じると、スピーカーは自動的にオフになります。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

スピーカーを配置する

SoundLink® Wireless Mobile speaker を室内で使用する場合、スピーカーを部屋のどこに置くかによって音質が変わります。スピーカーを室内で移動したり、別の部屋に移動する場合は、以下のガイドラインを参考にしてください。

- このスピーカーは、棚、カウンター、机、テーブルの上など、60～120cm の高さに配置した場合に最適な音質が得られるように設計されています。
- 低音域の力強さを増すには、スピーカーを壁の近くに配置してください。部屋の中央付近に置くと、低音域の聞こえ方が弱まります。
- 使用する際は、必ずカバーをスタンドとして使用してください。スピーカーを寝かせて使用しないでください。音声はユニットの前後から再生されます。
- 前面しか開口部がない狭い空間内に、スピーカーを配置しないでください。音質が低下するおそれがあります。
- スピーカーを濡れた面や汚れた面に置かないでください。カバーを閉じたときに、汚れや砂、水分などがスピーカーに付着するおそれがあります。

スピーカーを屋外で使用する場合、スピーカーからの距離によって音質が変わります。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

電源の接続

お買い上げ直後の SoundLink® Wireless Mobile speaker は、お使いになる前に電源コンセントに接続してください。

電源に接続するには

1. 同梱されている電源アダプターの形式に応じて、電源接続の準備を行ってください。
   - **A.** 電源アダプターの金属端子を前面に倒します。

     または

   - **B.** 電源アダプターに、付属の専用 100V プラグを取り付けます。

A. 金属端子を前面に倒す

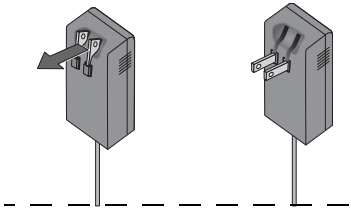

B. 専用 100V プラグを取り付ける

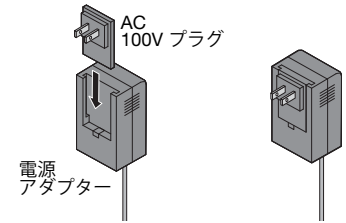

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

2. 電源アダプターの DC 電源コードを、SoundLink® speaker 背面の DC 電源コネクターに接続します。
3. 電源アダプターのプラグをコンセントに差し込みます。

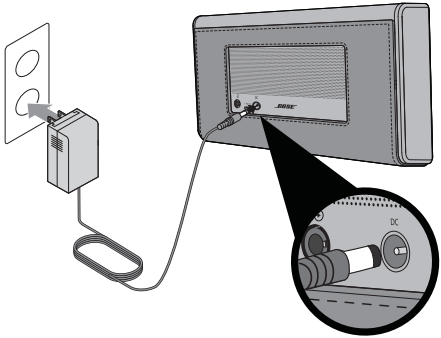

電源が接続され、充電が始まると、スピーカーからビープ音が聞こえます。

SoundLink® speaker は、電源に接続した状態ですぐにお使いいただけます。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

システムステータスインジケーターについて

SoundLink® speaker 前面パネルのステータスインジケーターは、現在選んでいるソース(音源)と機能を表示します。

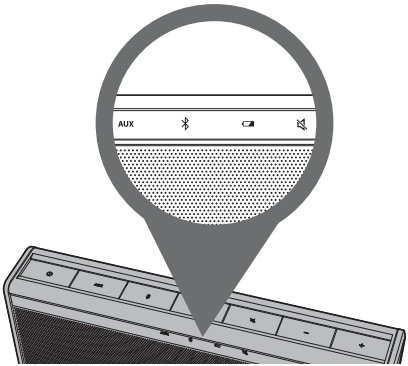

AUX　(AUX) に接続したソースを再生しています。

SoundLink® speaker で *Bluetooth*® ソースを選択している場合のスピーカーの状態を示します。

- 検出可能 – スピーカーは検出可能な状態で、新しい機器とペアリングできます。およそ 1 秒間隔でインジケーターがゆっくり点滅します。
- 接続中 – スピーカーはペアリングされている機器に接続しようとしています。およそ 0.5 秒間隔でインジケーターが素早く点滅します。
- 接続完了 – スピーカーはペアリングされている機器に接続されています。インジケーターは点灯します。
- 非接続 – スピーカーはペアリングされている機器に接続できます。およそ 3 秒間隔でインジケーターが短く点滅します。

Bluetooth ワイヤレス機器に関しては、19 ページの「*Bluetooth* 機器とのペアリング」をご覧ください。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

バッテリー残量を表示します。インジケータの表示については、23 ページの「バッテリーで使用するとき」をご覧ください。

音声がミュートされている場合に点滅します。

電源および操作ボタン

スピーカー上部に電源ボタンと操作ボタンがあります。

- スピーカーの電源をオン/オフします。
- 長押しするとバッテリーの充電状態が表示されます。23 ページの「バッテリー残量の確認」をご覧ください。

(AUX) に接続したソースを選択します。22 ページの「外部ソース機器の接続」をご覧ください。

- *Bluetooth*® 接続のソースを選択します。スピーカーは、最後にペアリングした機器を探して接続します。19 ページの「*Bluetooth* 機器とのペアリング」をご覧ください。
- 3 秒間長押しするとスピーカーは検出可能モードに入り、他の *Bluetooth* 機器とのペアリング待ち状態となります。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

- 接続されている機器を解除するには、このボタンを押します。SoundLink® speaker は、以前ペアリングされたことのある機器を探し、接続を試みます。

Bluetooth ソースが選択されている場合、機器を接続しないで 30 分経過すると、スピーカーは自動的にオフになります。

スピーカーの音声をミュートします。

「+」ボタンを押すと、スピーカーの音量が大きくなります。「-」ボタンを押すと、スピーカーの音量が小さくなります。音量ボタンを押すたびに、前面パネルのソースインジケーターが 1 回点滅します。音量が最大または最小になると、インジケーターが 2 回点滅します。

Bluetooth® 機器とのペアリング

2 台の *Bluetooth* 機器を接続し、相互に通信できる状態にすることを「ペアリング」と呼びます。機器をペアリングすると、それぞれの機器のメモリー内に互いの接続情報が保存されます。SoundLink® speaker と機器を一度ペアリングすれば、その後に再度ペアリングを行う必要はありません。

SoundLink® speaker には、*Bluetooth* 機器を 6 台までペアリングできます。ただし、同時に接続して音源を再生できるのは 1 台だけです。

Bluetooth 機器のペアリングを開始するには

1. *Bluetooth* 機器と SoundLink® speaker の電源をオンにし、スピーカーの *Bluetooth* ボタンを 3 秒間長押しして、スピーカーを検出可能状態にします。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

SoundLink® speaker が検出可能になると、スピーカーの *Bluetooth*® インジケーターがおよそ 1 秒間隔でゆっくりと点滅します。

2. 相手側の *Bluetooth* 機器を、スピーカーの検出可能状態に設定した上で、*Bluetooth* 機器リストを開きます。
3. *Bluetooth* 機器リストから「Bose SoundLink」という名前を選択します。
4. パスキーが必要な場合は「0000」と入力して OK を押します。一部の機器では、接続を確認するメッセージが表示されます。

   ペアリングが完了すると、*Bluetooth* 機器にその旨が表示されます。SoundLink® speaker では、*Bluetooth* インジケーターが点滅状態から点灯状態に変わります。

注記：*Bluetooth* 接続に問題がある場合、または機器をペアリングできない場合は、ステータスインジケーターが速い点滅を始めるまで、スピーカーの [Mute] ボタンを 10 秒間押し続けます。その後 [Power] ボタンを押して、SoundLink® speaker の電源をオンにします。

機器を接続するには

ペアリング済みの機器を接続するには、SoundLink® speaker の *Bluetooth* ボタンを押します。機器に接続するまで、スピーカーの *Bluetooth* インジケーターがおよそ 0.5 秒間隔で素早く点滅します。スピーカーと機器が接続されると、インジケーターが点滅状態から点灯状態に変わります。

別の機器をペアリングするには

Bluetooth 機器と SoundLink® speaker の電源をオンにし、スピーカーの *Bluetooth* ボタンを 3 秒間長押しして、スピーカーを検出可能状態にします。このページの手順 2～4 に従います。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

SoundLink® speaker は、過去に接続された 6 台までの機器の情報を保存しています。機器を 7 台以上ペアリングすることも可能ですが、情報が保存されるのは 6 台までです。6 台分の情報を保存した上で機器をもう 1 台ペアリングすると、使用履歴が最も古い機器がメモリーから削除され、新しくペアリングした機器が保存されます。

メモリーを消去する

SoundLink® speaker のメモリーから全てのペアリング済み機器の情報を消去するには、スピーカーの *Bluetooth*® ボタンをビープ音が聞こえるまで(およそ 10 秒間)長押しします。

SoundLink® speaker から全ての *Bluetooth* 機器の情報が消去され、検出可能モードに移行します。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

外部ソース機器の接続

ポータブルデジタルオーディオプレーヤーなどの外部のオーディオ機器を SoundLink® speaker に接続することができます。接続する際は、3.5 mm プラグ付音声ケーブルのプラグを SoundLink® システムの AUX 入力コネクターにつなぎます。両側が 3.5 mm プラグのケーブルが 1 本付属しています。

外部ソースを接続するには

1. 外部機器に接続しているケーブルを、SoundLink® speaker の ⊕ (AUX) コネクターにつなぎます。
2. AUX ボタンを押します。
3. 接続した機器の音量を最大のやや手前に設定し、SoundLink® speaker の音量調整ボタンを使って音量の調節を行います。

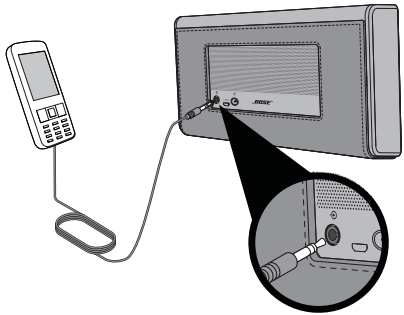

機器を接続したまま音声を再生しない状態が 30 分経過すると、スピーカーは自動的にオフになります。

サービスコネクターについて

スピーカーの背面にあるサービスコネクターは、ソフトウェア更新の際に使用します。機器を接続しても音声は再生されません。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

バッテリーで使用するとき

バッテリーを完全に充電した状態から、最大音量で約3時間の連続再生が可能です。バッテリーでの再生時間は、再生音量によって変化します。音量を下げることによって、再生時間を延ばすことができます。

バッテリー残量の確認

通常バッテリーインジケーターは、電力消費を抑えるために消灯しています。残量を調べるときは、**電源**ボタンを長押ししてバッテリーインジケーターを確認してください。

緑：.....満充電時の 70%以上
黄色：.....満充電時の 20%～70%
赤：.....20%以下(充電してください)

バッテリー保護モードについて

SoundLink® speaker に 14 日間以上電源アダプターから電源を供給せず、かつ操作をされなかった場合、本体はバッテリーの電力消費を抑えるために保護モードに入ります。スピーカーを再起動させるためには、本体に電源を接続してください(以下の「バッテリーの充電について」を参照)。バッテリーを充電しながら、システムをすぐに使用できます。

バッテリーの充電について

バッテリーの充電が必要になると、SoundLink® speaker のバッテリーインジケーターが赤く点灯します。バッテリーは、カバーの開閉状態に関わらず充電が可能です。

バッテリーを充電するには
DC 電源コードを SoundLink® speaker 背面の DC 電源コネクターに接続します。次に、電源アダプターのプラグをコンセントに差し込みます。電源を接続すると、スピーカーからビープ音が聞こえます。充電が完了するまで、約 3 時間かかります。バッテリーインジケーターで充電の状況を確認できます。

黄色：.....バッテリー充電中
オフ：.....充電完了

注記：インジケーターが赤く点灯するまでバッテリーが放電した状態で、SoundLink® speaker を長期間保管しないでください。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

お手入れ方法

バッテリーの交換について

次のような場合はバッテリーを交換してください。

- 10 時間以上充電しても、バッテリーインジケーターが黄色のままで変わらない場合。
- バッテリーによる使用時間が極端に短くなった場合。

バッテリーを交換する場合は、お近くのボーズ販売店にお問い合わせください。お住まいの国／地域のボーズ製品正規販売店の連絡先情報は、http://global.Bose.com を参照してください。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

故障かな？と思ったら

トラブル	対処方法
スピーカーの電源が入らない(AC 電源接続時)	• システムを接続している電源コンセントに電源が供給されていることを確認します。
スピーカーの電源が入らない(バッテリー動作時)	• バッテリーが保護モードへ移行している、あるいは放電している可能性があります。電源コンセントに接続し、バッテリーを通常動作モードにしてお試しください。
ペアリングした *Bluetooth*® 機器に接続できない	• パスキーが必要な場合は、正しい値を入力しているか確認します。 • SoundLink® speaker の電源をオフにしてからもう一度オンにします。 • SoundLink® speaker を *Bluetooth* 機器のペアリングリストから削除します(操作方法は機器の取扱説明書を参照)。その後、機器と SoundLink® speaker をもう一度ペアリングします。
SoundLink® speaker にソースが接続されているのに音楽が再生されない	• 近くのペアリングされている *Bluetooth* 機器(Bose® 推奨機器を含む)を全てオフにし、音楽を再生する機器を再接続します。 • SoundLink® speaker の電源をオフにしてからもう一度オンにします。
Bluetooth 機器の音声が再生されない	• SoundLink® speaker の音声がミュートされていたり、音量が下がっていないことを確認します。 • *Bluetooth* 機器で音楽が再生されており、音量が下がっていないことを確認します。 • *Bluetooth* 機器までの距離が離れすぎている可能性があるため、機器を SoundLink® speaker に近付けます。 • SoundLink® speaker の電源をオフにしてから、もう一度オンにします。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

お手入れ方法

トラブル	対処方法
SoundLink® speaker と *Bluetooth*® 機器をペアリングできない	• SoundLink® speaker が検出可能な状態であることを確認します。*Bluetooth* インジケーターがゆっくり点滅を始めるまで、*Bluetooth* ボタンを 3 秒間長押しします。 • *Bluetooth* 機器で *Bluetooth* 機能がオンになっていることを確認します。 • *Bluetooth* 機器までの距離が離れすぎている可能性があるため、機器を SoundLink® speaker に近付けます。 • *Bluetooth* 機器が音声の転送に対応していることを確認します。 • *Bluetooth* 機器と SoundLink® speaker を、電波障害が発生する可能性のある機器(コードレス電話、電子レンジ、無線 LAN ルーター、他の *Bluetooth* 機器など)から離します。 • 可能な場合は、近くにある他の *Bluetooth* 機器をオフにするか、*Bluetooth* 機能を無効にします。 • SoundLink® speaker の電源をオフにしてから、もう一度オンにします。 • 携帯オーディオ機器を他の *Bluetooth* 機器とペアリングする方法については、機器の取扱説明書、ヘルプ、テクニカルサポートなどを参照してください。 • ミュートボタンを 10 秒間長押しして、SoundLink® speaker をリセットします。*Bluetooth* 機器の接続が解除され、SoundLink® speaker の電源がオフになります。その後 [Power] ボタンを押して、SoundLink® speaker の電源をオンにします。 • お使いの *Bluetooth* 機器の最新バージョンのソフトウェアを確認します。
AUX ソースの音質が悪い	• AUX ソースの音量を下げます。 • 3.5 mm プラグが SoundLink® speaker にしっかりと接続されていることを確認します。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

トラブル	対処方法
Bluetooth® 機器の音質が悪い	• *Bluetooth* 機器までの距離が離れすぎている可能性があるため、機器を SoundLink® speaker に近付けます。 • *Bluetooth* 機器と SoundLink® speaker を、電波障害が発生する可能性のある機器(他の *Bluetooth* 機器、コードレス電話、電子レンジ、無線 LAN ルーターなど)から離します。 • *Bluetooth* 機器で実行しているアプリケーション数を減らします。 複数のアプリケーションを実行すると、音声を転送するために利用できる内部リソース量が減少します。不要なアプリケーションを終了すると、音質が改善される場合があります。 • WiFi をオフにして音質が改善されるかどうか確認します。 • *Bluetooth* 機器と SoundLink® speaker のペアリングを解除して、もう一度ペアリングします。これにより、機器を最初にペアリングした時に発生した問題が解消される場合があります。 • SoundLink® speaker の電源をオフにしてから、もう一度オンにします。 • ミュートボタンを 10 秒間長押しして、SoundLink® speaker をリセットします。*Bluetooth* 機器の接続が解除され、SoundLink® speaker の電源がオフになります。その後 [Power] ボタンを押して、SoundLink® speaker の電源をオンにします。 • お使いの *Bluetooth* 機器の最新バージョンのソフトウェアを確認します。
AUX ソースの音声が聞こえない	• 接続している機器がオンになっていて、再生中であることを確認します。 • AUX ボタンを押し、AUX ソースインジケーターが点灯することを確認します。 • 3.5 mm プラグが SoundLink® speaker にしっかりと接続されていることを確認します。 • 接続機器の音量を上げます。 • SoundLink® speaker の音量を上げます。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

お手入れについて

製品の表面が汚れた場合は、乾いた柔らかい布で汚れを拭き取ってください。

- アルコール、ベンジン、シンナー、あるいはスプレー式殺虫剤、消臭剤、芳香剤などの揮発性のものをかけないでください。
- 本機の開口部から液体をこぼしたり、物を入れたりしないでください。

お問い合わせ先

故障および修理のお問い合わせ先

ボーズ株式会社　サービスセンター
お客様専用ナビダイヤル 0570-080-023
PHS、IP電話からは、Tel 03-5489-1124へおかけください。
〒206-0035 東京都多摩市唐木田1-53-9
唐木田センタービル

製品等のお問い合わせ先

ボーズ株式会社　ユーザーサポートセンター
お客様専用ナビダイヤル 0570-080-021
PHS、IP電話からは、Tel 03-5489-0955へおかけください。

保証

保証の内容および条件は、付属の保証書をご覧ください。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

仕様

電源定格
入力 : 100～240VAC、50/60Hz、600mA
出力 : 17VDC、最大 1A

入力電源定格
入力 : 17～20 VDC、最大 1A

外形寸法
244(W) X 130(H) X 48 (D) mm

質量
1.3 kg(2.8 lb.)

使用時の温度範囲
0°～45°C (32°～113°F)

***Bluetooth*® QD ID**
SoundLink® speaker: B017612

Bluetooth® のワードマークとロゴは、Bluetooth SIG, Inc. が所有する登録商標で、Bose Corporation はこれらの商標を使用する許可を受けています。

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf

BOSE CORPORATION

USA
Bose Corporation
The Mountain
Framingham, MA 01701-9168
1-888-757-9958
Phone hours – ET (Eastern Time):
Weekdays 8:30 a.m. to 8 p.m.
Saturdays 9 a.m. to 3 p.m.
owners.Bose.com

Canada
Bose Limited
280 Hillmount Road, Unit 5
Markham, Ontario
Canada L6C 3A1
1-800-465-2673
Phone hours - ET (Eastern Time):
Weekdays 9 a.m. to 5 p.m.
www.bose.ca

Australia
Bose Pty Limited
Unit 3/2 Holker Street
Newington NSW 2127
TEL 1 800 061 046 (AU)
TEL 008 501 511 (NZ)
FAX 612 8737 9924
www.Bose.com.au
www.Bose.com.nz

Belgique/België
Bose N.V.
Limesweg 2
B-3700 Tongeren
TEL 012-259960
FAX 012-390840
www.Bosebelgium.be

China
Bose Greater China Operations
12th Floor, Fudan Science Park Plaza
#11 Guotai Road
Shanghai 200433
People's Republic of China
TEL 400-880-2266
FAX 021-65105380
www.Bose.cn

Danmark
Bose A/S
Industrivej 7
2605 Brøndby
TEL 04343-7777
FAX 04343-7818
www.Bose.dk

Deutschland
Bose GmbH
Kundenbetreuung
Neuenhauser Str. 73
D-48527 Nordhorn
TEL.: 0800 2673444
www.Bose.de

Finland
Bose Finland
Kornetintie 6B
00380 Helsinki
TEL 10 778 69 00
FAX 10 778 69 09
www.Bose.fi

France
Bose S.A.S.
12 rue de Témara
78100 Saint Germain en Laye
TEL 01 30 61 33 08
FAX 01 30 61 63 88
www.Bosefrance.fr

India
Bose Corporation India Private Limited
The Bose Service Centre
C13, Ground Floor
SDA Commercial Complex
Community Centre
New Delhi 110016
TEL 1 800 102 2673
FAX +91 11 47168650
techsupport@boseindia.com
www.Boseindia.com

Ireland
Bose SMS Ltd.
Castleblayney Road
Carrickmacross, Co Monaghan
TEL (042) 9671531
FAX (042) 9671502
www.Bose.ie

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual212272.pdf

Italia
Bose S.p.A.
Via della Magliana 876
00148 Roma
TEL 06 60 292 292
FAX 06 60 292 119
www.Bose.it

Japan
Bose K.K.
Shibuya YT Building
28-3 Maruyama-cho
Shibuya-ku, Tokyo 150-0044
TEL 0570-080-021
FAX 03-5489-1041
www.Bose.co.jp

Luxemburg
Bose N.V.
Limesweg 2
B-3700 Tongeren
TEL + 32 12 259 960
FAX +32 12 390840
www.Bosebelgium.be

Mexico
Bose de Mexico S. de R.L. de C.V.
Paseo de las Palmas # 405
Despacho 204
Lomas de Chapultepec
C.P. 11000, Mexico D.F., Mexico
TEL +52 (55) 52 02 35 45
TEL +52 (55) 52 02 41 95
FAX +52 (55) 52 02 37 28
www.Bose.com.mx

Nederland
Bose B.V.
Nijverheidstraat 8
1135 GE Edam
TEL 0299-390290
FAX 0299-390109
consumenteninfo@Bose.com
www.Bose.nl

Norge
Bose A/S
Kongsvinger Festning
2213 Kongsvinger
TEL 62 82 15 60
FAX 62 82 15 69
www.Bose.no

Poland
Bose sp. z o.o.
ul. Woloska 12
02-675 Warszawa
TEL 22-852-2928
FAX 22-852-2927
www.Bose.pl

Österreich
Bose Ges.m.b.H.
Vienna Business Park
Wienerbergstrasse 7 (10.OG)
A-1100 Vienna
TEL 01-60404340
FAX 01-604043423
www.Bose.at

Schweiz
Bose AG
Hauptstrasse 134
4450 Sissach
TEL 061-9757730
FAX 061-9757744
www.Bose.ch

Sverige
Bose A/S
Johannefredsgatan 4
S-43153 Mölndal
TEL 031-878850
FAX 031-274891
www.Bose.se

United Kingdom
Bose Limited
1 Ambley Green
Gillingham Business Park
Gillingham, Kent ME8 ONJ
TEL 0870-741-4500
FAX 0870-741-4545
www.Bose.co.uk

World Wide Web
www.Bose.com
www.Bose.eu
global.Bose.com

Pdf downloaded from http://www.thepdfportal.com/soundlinklxmanual_11272.pdf